
CASEWOOD STUDIOS

LURIAN NIGHTSTAND TRADITIONAL FT-STB07-02-03-01 / FT-STB07-02-03-02

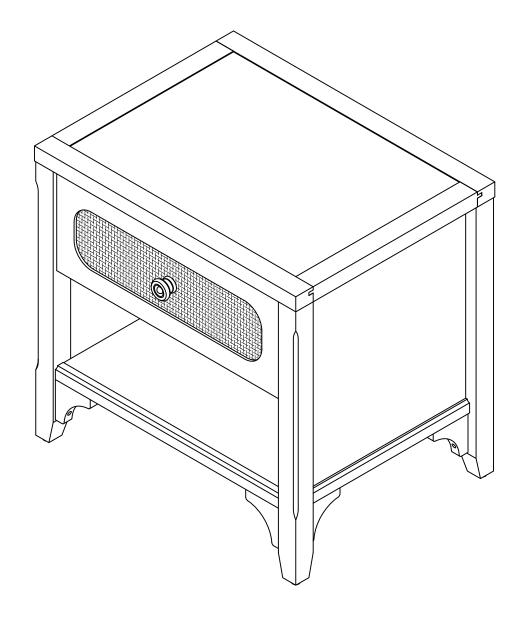

ASSEMBLY INSTRUCTIONS

Introduction

Please read all instructions first.

All you need to assemble your unit is a Phillips screwdriver.

Before you begin, take some time to check all parts against the hardware and parts list on the next pages.

Please place all parts on a soft cloth or carpet to prevent scratching during assembly.



To avoid collapse or injury, DO NOT sit, stand or climb on this unit. DO NOT stack heavy objects on this unit.

NEVER put a TV on this product.

NEVER allow children to climb or hang on drawers.

Care and Maintenance


Clean with a soft damp cloth.


Should a deep scratch or gouge occur, we recommend touch up with a matching paint or stain available in most hardware stores.

PARTS & HARDWARES


aa = 2 pcs	Wood Screw 1 1/4"	bb = 8 pcs	Wood Screw 1 1/4"	cc = 4 pcs	Wood Screw 3/4	dd = 6 pcs	Wood Screw 5/8"
+1 Extra		+1 Extra		+1 Extra		+1 Extra	
	<i><</i>		<i>4111111111111111111111111111111111111</i>		411111111		4mm {
ee = 14 pcs	Camlock Bolt	ff = 14 pcs	Camlock	gg = 1 pc	Handle Bolt	hh = 1 pc	Handle
+1 Extra		+1 Extra			}	·	
ii = 4 pcs	Dowel	jj = 4 pcs	Wedge				
+1 Extra		+1 Extra			Tool Required	(Not Included)	


A. TOP ASSEMBLY	1X	G. BACK PANEL	1X
B. LEFT ASSEMBLY	1X	H. DRAWER FRONT	1X
C. RIGHT ASSEMBLY	1X	I. DRAWER LEFT	1X
D. TOP RAIL	1X	J. DRAWER RIGHT	1X
E. BOTTOM RAIL	1X	K. DRAWER BACK	1X
F. BOTTOM PANEL	1X	L. DRAWER BASE	1X

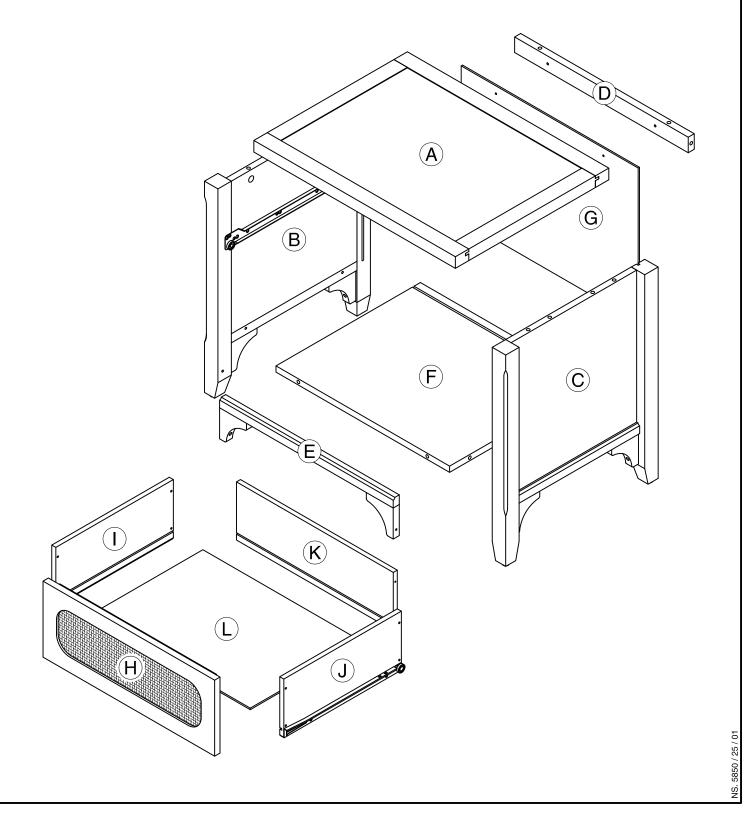


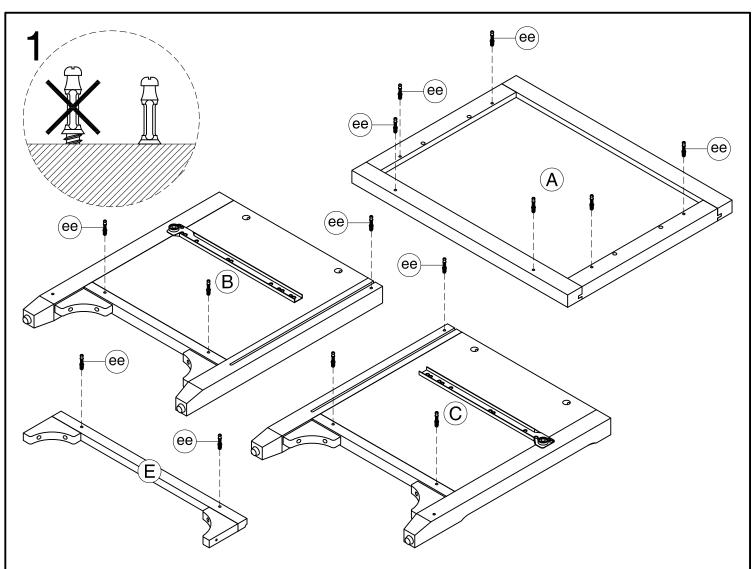


- * Attach Camlock Bolts (ee) to Top, Left and Right Assemblies (A), (B) and (C), and Bottom Rail (E). * Screw-in Camlock Bolts must be screwed down flush.

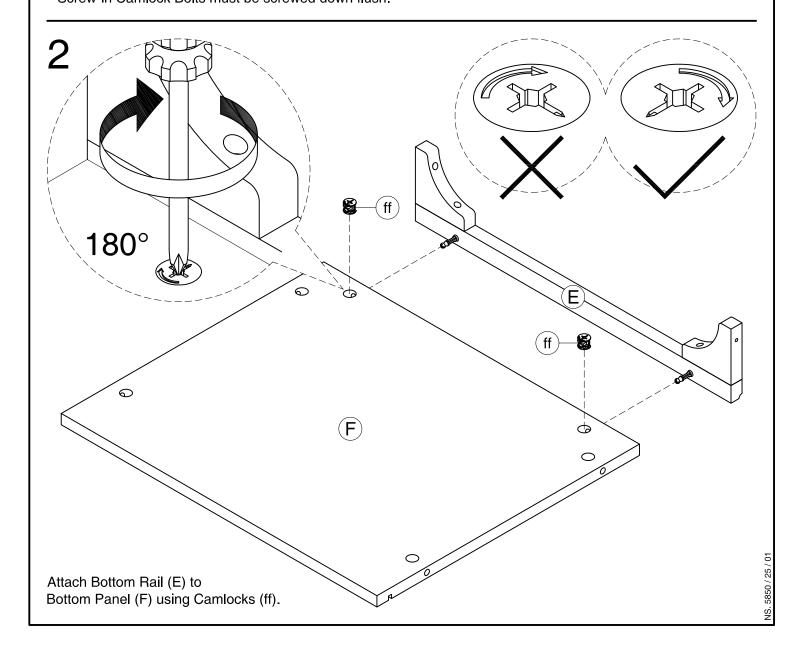


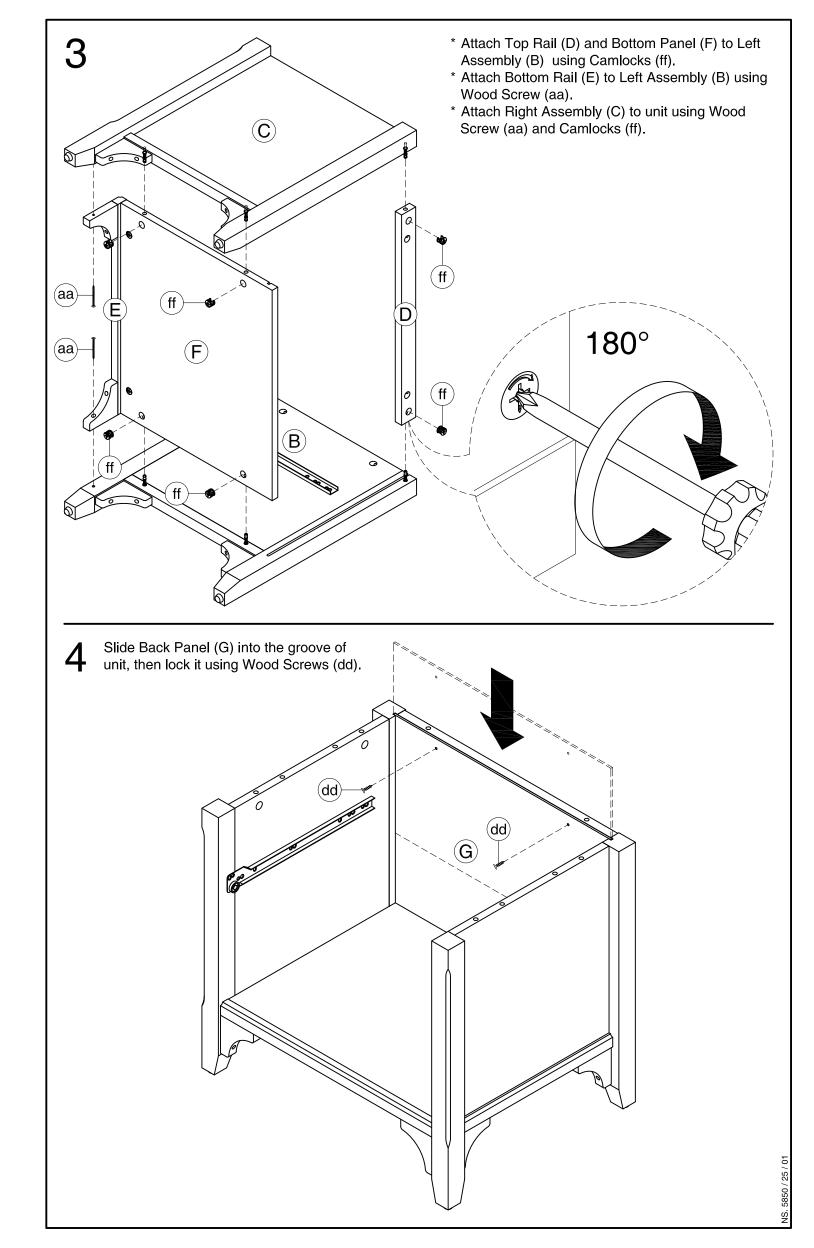

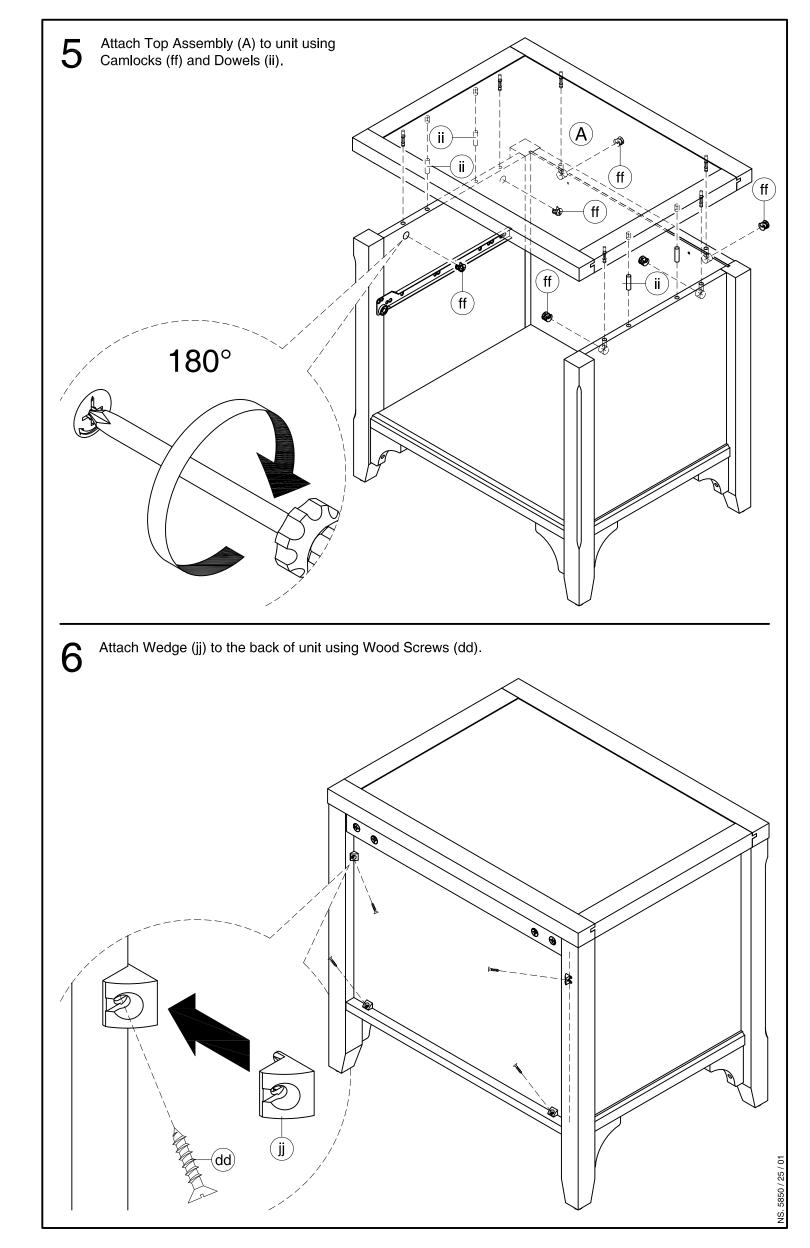


- * Attach Handle (hh) to Drawer Front (H) using Handle Bolt (gg).
- * Attach Drawer Left and Right (I) and (J) to Drawer Back (K) using Wood Screw (bb).
- Slide Drawer Base (L) into the groove.
- * Attach Drawer Front (H) to Drawer Left and Right (I) and (J) using Wood Screw (bb).

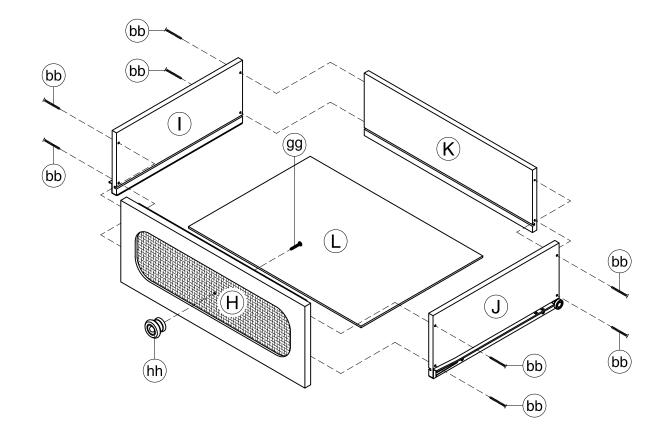

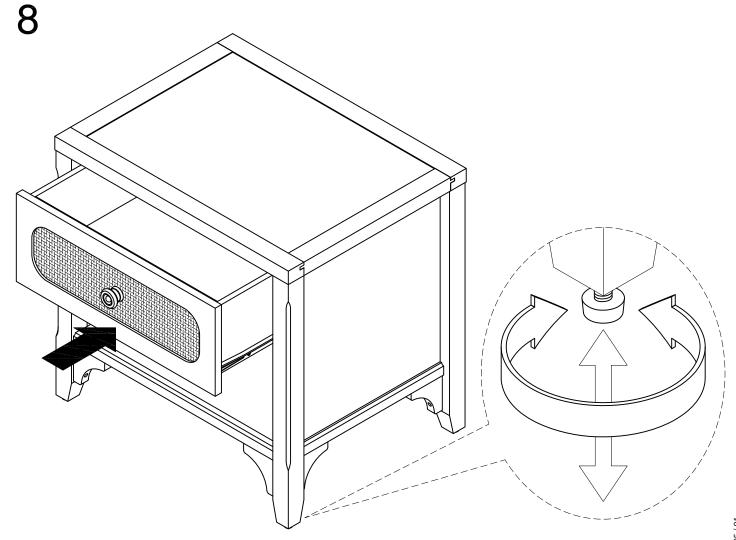


- * Slide Drawer into position
- * Adjust the adjuster that has already been assembled to the legs to stabilize your unit.

I. IF THE DRAWER DOES NOT ALIGN

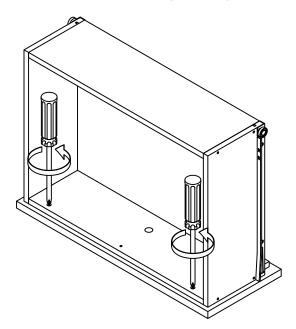


Loosen slighty the upper screws.


II. IF THE DRAWER ALREADY ALIGNS

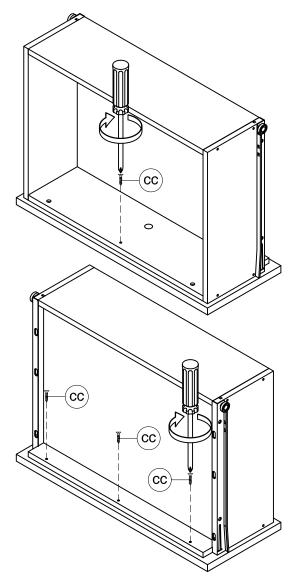

Pull out drawer slowly. Lock the drawer front panel into position using Wood Screws (cc).

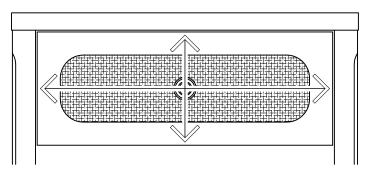

Insert the drawer into the main body, then adjust the drawer front panel left or right and up or down, until the drawer gaps look proportional.

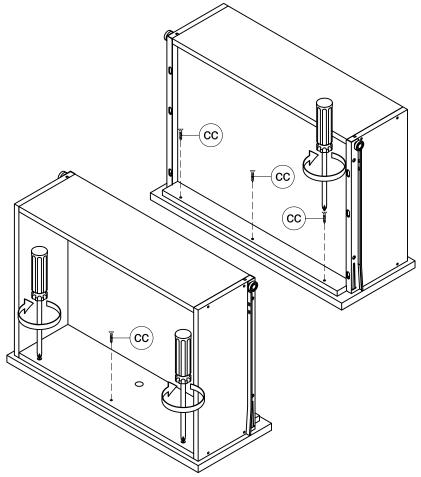

Pull the drawer open slowly and tighten the upper screws. Make sure the front panel does not move and lock the drawer front panel into position using Wood Screws (cc).